



Bamboo Blinds

measuring instructions


For accurate measurements please use a metal tape measure, and take measurements in centimetres, to the nearest 0.1cm.

- All of our blinds can be fixed into the face of the window frame or wall, or into the top of the lintel - allowing you total control of the depth your blind can be positioned in the depth of your window recess.
- Choose whether you want the blinds to hang inside or outside the window recess.
- Please check for the proximity of adjacent walls, furniture, window handles etc. when measuring for your blinds.



Recess

For blinds to hang inside the window recess:
Measure the drop by taking the measurement from the top of the recess to the window sill, in three places as shown. Measure the width of the window recess from wall to wall, in three places as shown. Take the smallest measurement. We will make all adjustments to ensure your blinds fit perfectly.

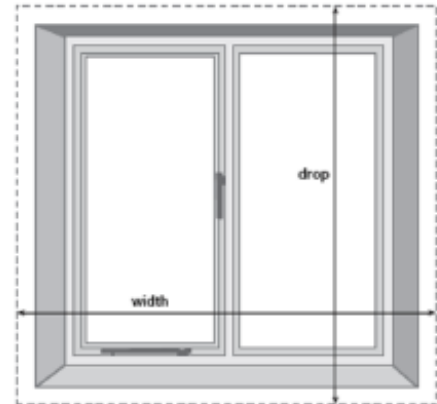

Exact

For blinds to hang outside the window recess:
Measure the exact area you would like the blind to cover as shown.

aftercare

Look after your blinds by following the straightforward operating instructions below.

Operating Instructions

- To raise the blind, pull the cords down until the blind reaches your desired height.
- To lower the blind, pull the cords across the face of the blind to release the cordlock and carefully let the cords slide through your fingers.

Cleaning

- Regular and careful vacuuming using the brush attachment is all that's required to keep Woodweave blinds looking their best.

Your local supplier:

NB: The manufacturer will not accept responsibility for damage to blinds caused by misuse.
Fitting items may vary depending upon type of fitting requested.

fitting instructions

fittings


- 1** Brackets:
quantity to suit
length of blind



- 2** Wood screws:
min 4



- 3** Blind: 1

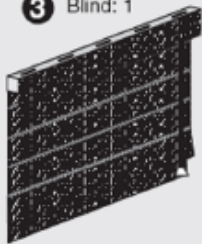


Outside Recess

If fitting the blind outside the window, measurements (C) will need to be the same. To work out (C), simply minus (B) from (A) and divide the answer by two. Follow instructions for FACE FIXING

Inside recess

Decide whether to FACE or TOP FIX. FACE FIX to fit the bracket to the window frame. TOP FIX to the lintel if the window frame is uPVC, or if there are any obstructions, e.g. window handles.

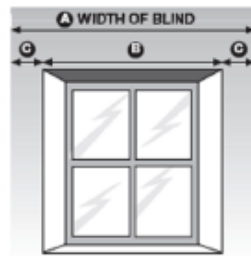

TOP FIX FACE FIX

Place blind in fitting position. Space the brackets evenly




Possible bracket position

step two

Top Fixing

Measure the distance that any handles protrude from the frame, A. Mark this measurement on the lintel and use it to position the back of the bracket.

Choose one of the slots cut into the headrail closest to the cordlock and measure the distance from the end of the blind. Use this dimension as a guide to the bracket position and fix a bracket. Repeat the process using a slot that's a similar distance from the other side of the blind.

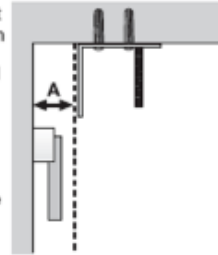

Face Fixing


Choose one of the slots cut into the headrail closest to the cordlock and measure the distance from the end of the blind. Use this dimension as a guide to the bracket position, and fix a bracket. Repeat the process using a slot that's a similar distance from the other side of the blind.



step one


step three

Offer the blind up to the brackets ensuring the locating pin shows through the slot, and attach wing nut while supporting the blind.

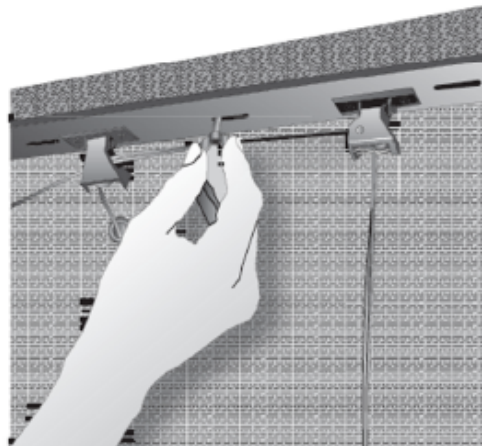

To raise the blind, pull the cords down until the blind reaches your desired height.

To lower the blind, pull the cords across the face of the blind to release the cordlock and carefully let the cords slide through your fingers.

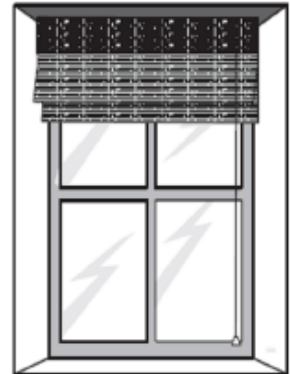

step four

step five

WARNING

IN THE INTEREST OF SAFETY, IT IS ADVISABLE TO KEEP ALL PULL CORDS AND CHAIN/BEAD CORDS OUT OF THE REACH OF CHILDREN.

For more information or help with fitting your blinds please call (0)20 8805 8809 or email info@furnishingworkshop.com