



## How to Fit

### Fitting Instructions

#### Fitting the Perfect Fit Blind to the Window Frame

##### Step 5. Insert window fixing brackets (P4508/P4509)

For the correct spacing distance (85mm) place a credit card into the corner of the window (Fig. 7).

Line up the window fixing bracket at the base of the card (or top of the card depending upon which corner of the window you are working) and fit the bracket by pushing it between the glass and the rubber seal of the window (Fig. 8).

Using the credit card guarantees a perfect line up for each of the holes in your frame with each of the brackets (Fig. 9).

Fit any intermediate brackets accordingly.




### Step 6. Fix frame to window

Line up the holes in the frame with the window fixing brackets (Fig. 10).

Firmly press down the frame onto each bracket on one side at a time to ensure easier installation (Fig. 11).

Your blind is now installed.

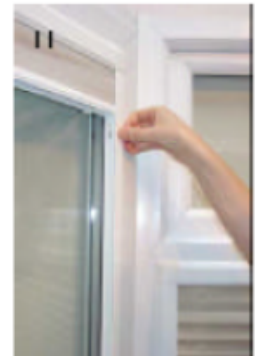

### Step 7. Window handles

Blinds fitted to windows with handles may require packing pieces to be inserted between the framework and the handle. This is to stop the handle from touching the frame when operated. There are two different lengths available (P4250/P4252).

Lift the handle to an upright position and remove the screw caps (Fig. 12).

Unscrew the handle from the frame (Fig. 13)

Place the packing piece(s) in between the handle and the frame (Fig. 14).

Re-fit the handle (Fig. 15)



## Perfect Fit removal

### Step 8. Removal for cleaning purposes

To remove the frame from the window, raise the blind to a completely open position (Fig. 16).

Release the frame from each bracket by inserting a flat-headed screwdriver into the hole and depress against the lip of the bracket (Fig. 17).

Remove one side at a time to ensure easier removal (Fig. 18).



Perfect Fit with Venetian Blinds

Perfect Fit with Pleated Blinds



For more information or help with fitting your blinds please call (0)20 8805 8809 or email [info@furnishingworkshop.com](mailto:info@furnishingworkshop.com)