




FURNISHING WORKSHOP
MAKE YOUR HOME YOUR OWN

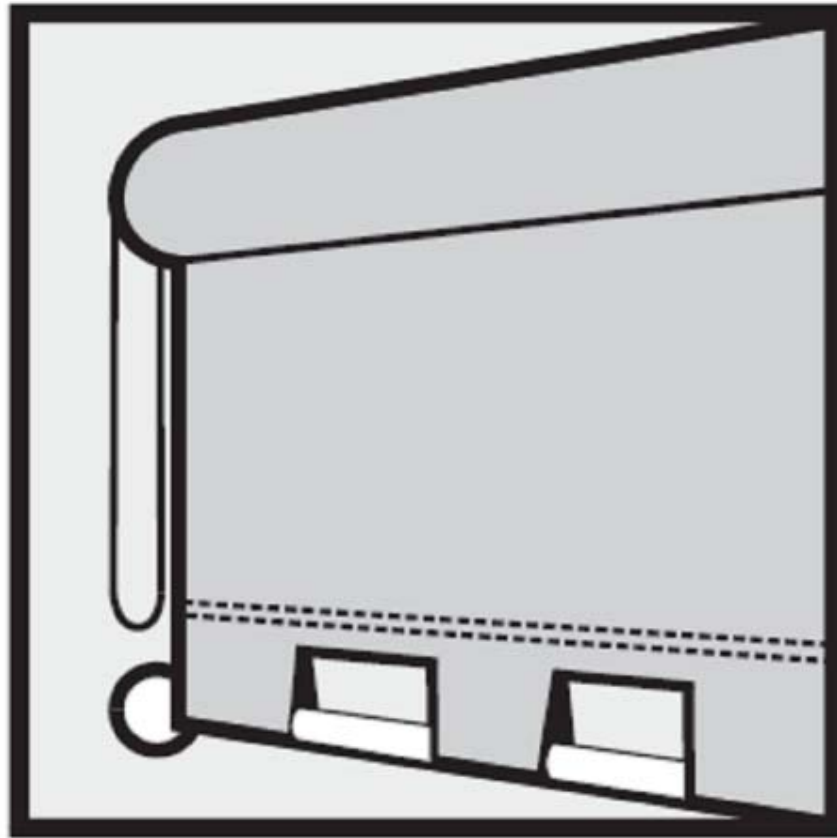

Side Control Roller Blind

Fitting and Operating Instructions

Before attempting to fit your window blind,
please read the instructions carefully.

Side Control Roller Blinds

In the interests of child safety it is advisable that one of the following child safety components is used when fitting a side control roller blind.

Easy Break Chain Connector

The chain connector will break apart when excessive force is exerted on the operating chain.

Bell Toggle

The chain loop can be split and the bell toggles attached to each end of the chain.

Cord & Chain Tidy


The cord and/or chain can be secured within the tidy and retained tight against the wall.

Cord & Chain Cleat

The cord and chain cleat is fixed to the side of the window recess and allows the cord or chain to be neatly wrapped around it, safely out of the reach of children.


Please use a **Child Safety Warning Tag** and attach to every finished blind.

Blinds with Side Control Chain

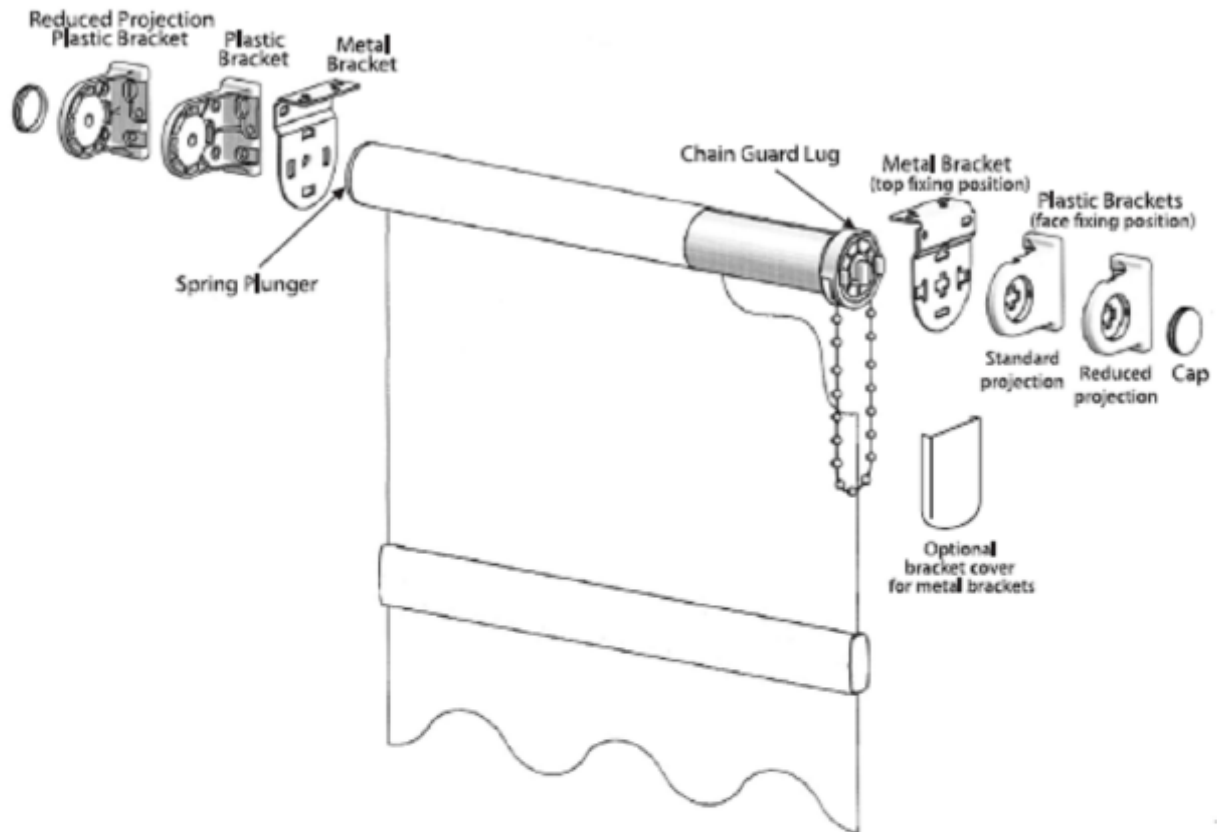

Fitting the Brackets

The bracket positions illustrated are for a blind with the control chain on the right hand side of the blind. For a blind with the control chain on the left, the brackets should be at the opposite ends. Brackets can be top, side or face fixed to any flat surface. They must be level to ensure the smooth operation of the blind. Check that the rolled up fabric will not touch any surface. To calculate the spacing between the brackets, add 35mm (1³/₈") to the width of the blind fabric. Fix the brackets so that the outsides of the brackets are this distance apart.

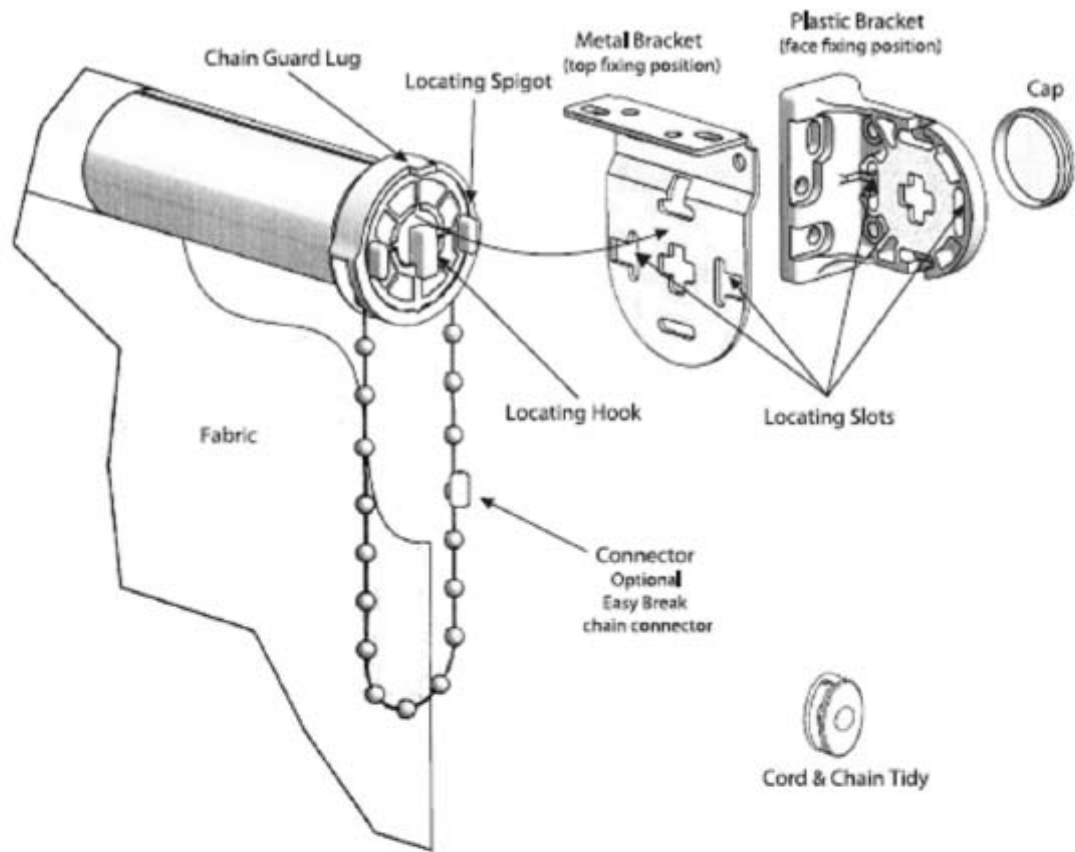

Fitting the Blind

Hold the blind to the brackets with the fabric hanging from the back of the blind. Fit the spring plunger into its bracket and push the blind into the bracket, depressing the plunger. With the locating hook pointing downwards and the chain guard lug at the top, place the hook into the vertical part of the '+' shaped hole in the bracket. Allow the hook to drop downwards so that it locks into place in the bracket.

IMPORTANT

Please read the child safety information attached to your blind.

For more information or help with fitting your blinds please call (0)20 8805 8809 or email info@furnishingworkshop.com